




USING BLACKMAGIC INTENSITY CARD

- I. Install the card
- II. Install the drivers
- III. Plug in the video source

- a1. **HDMI** - insert into "Video In" input (at the outer side, the middle connector is HDMI output)
- b1. **COMPONENT** - insert the 3 component connectors into "Y IN", "R-Y IN", "B-Y IN" of the break-out cable, match the colors
- c1. **COMPOSITE** - insert composite connector into "Y IN" of the break-out cable.
- d1. **S-VIDEO** - use an S-video to RCA adapter cable, plug into "Y IN", "B-Y IN" of the break-out cable


IV. Plug in the audio source

- a2. **HDMI audio** - do nothing else
- b2. **RCA audio** - plug into "AUDIO IN LEFT" and "AUDIO IN RIGHT" of the break-out cable
- c2. **External audio** - plug your audio source into computer's Line-In or Microphone input

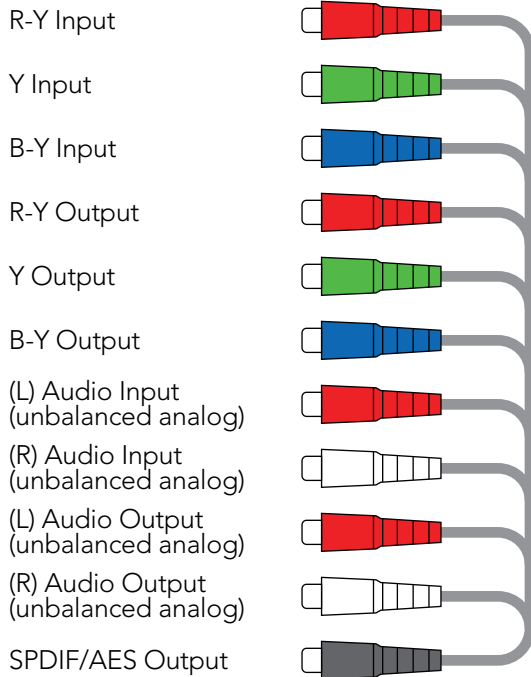

V. Configure

1. Open "Intensity" application in Control Panel
2. Choose the appropriate input in the "Set Input" drop-down:
 - a. Choose "HDMI Video & HDMI Audio" in the a1&b1 situation above;
 - b. Choose "HDMI Video & Analog RCA Audio" in any of the a1&b2, a1&c2 situations above
 - c. Choose "Y, R-Y, B-Y Video & Analog RCA Audio" in any of the b1&b2, b1&c2 situations above
 - d. Choose "NTSC/PAL (Y In) & Analog RCA Audio" in any of the c1&b2, c1&c2 situations above
 - e. Choose "S-Video & Analog RCA Audio" in any of the d1&b2, d1&c2 situations above
3. Select a proper output processing. If you are unsure of your video source capabilities leave it to off and change later.

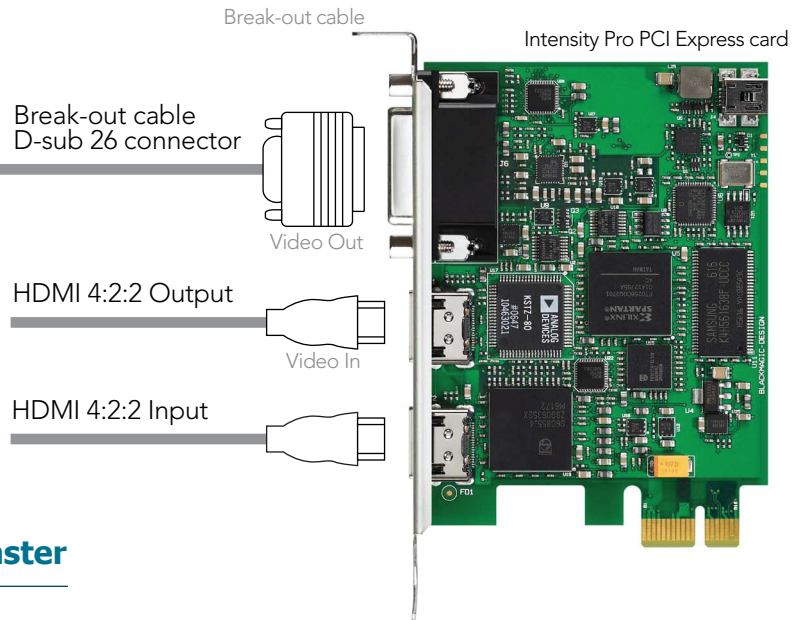

VI. Capture with The HD Wave broadcaster

1. Open broadcaster
2. Select "Decklink Video Capture" as a video source
3. Choose the proper video format. If you are unsure of your video source capabilities try all formats until you see a correct picture in the video preview area.
4. Choose "Decklink Audio Capture" as an audio source in the a2 or b2 situations above; choose your default audio source in the c2 situation above.



USA Office Contact
 Email: info@eyepartner.com
 Yahoo: islandace2002
 Skype: jamoncam
 Phone: 1.305.289.4557

EUROPE Office Contact
 Email: sales@eyepartner.com
 Yahoo: eliza_ciumac
 Skype: eliza_abl
 Phone: +40.3324.14752
 Mobile: +40.771.264.031
 From USA: +1.305.455.8675
 http://www.eyepartner.com