




# USING BLACKMAGIC INTENSITY CARD

- I. Install the card
- II. Install the drivers
- III. Plug in the video source

- a1. **HDMI** - insert into "Video In" input (at the outer side, the middle connector is HDMI output)
- b1. **COMPONENT** - insert the 3 component connectors into "Y IN", "R-Y IN", "B-Y IN" of the break-out cable, match the colors
- c1. **COMPOSITE** - insert composite connector into "Y IN" of the break-out cable.
- d1. **S-VIDEO** - use an S-video to RCA adapter cable, plug into "Y IN", "B-Y IN" of the break-out cable


## IV. Plug in the audio source

- a2. **HDMI audio** - do nothing else
- b2. **RCA audio** - plug into "AUDIO IN LEFT" and "AUDIO IN RIGHT" of the break-out cable
- c2. **External audio** - plug your audio source into computer's Line-In or Microphone input

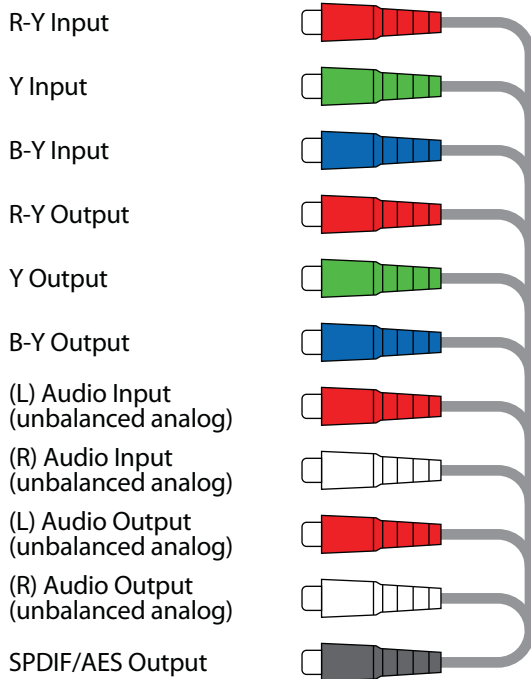

## V. Configure

1. Open "Intensity" application in Control Panel
2. Choose the appropriate input in the "Set Input" drop-down:
  - a. Choose "HDMI Video & HDMI Audio" in the a1&b1 situation above;
  - b. Choose "HDMI Video & Analog RCA Audio" in any of the a1&b2, a1&c2 situations above
  - c. Choose "Y, R-Y, B-Y Video & Analog RCA Audio" in any of the b1&b2, b1&c2 situations above
  - d. Choose "NTSC/PAL (Y In) & Analog RCA Audio" in any of the c1&b2, c1&c2 situations above
  - e. Choose "S-Video & Analog RCA Audio" in any of the d1&b2, d1&c2 situations above
3. Select a proper output processing. If you are unsure of your video source capabilities leave it to off and change later.

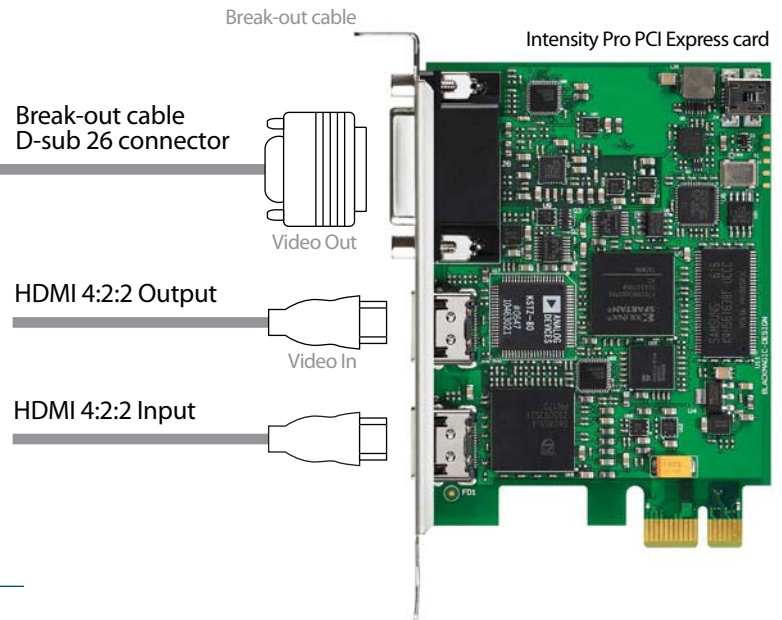

## VI. Capture with blinko broadcaster

1. Open broadcaster
2. Select "Decklink Video Capture" as a video source
3. Choose the proper video format. If you are unsure of your video source capabilities try all formats until you see a correct picture in the video preview area.
4. Choose "Decklink Audio Capture" as an audio source in the a2 or b2 situations above; choose your default audio source in the c2 situation above.



USA Office Contact  
 Email: info@eyepartner.com  
 Yahoo: islandace2002  
 Skype: jamoncam  
 Phone: 1.305.289.4557

EUROPE Office Contact  
 Email: sales@eyepartner.com  
 Yahoo: eliza\_ciumac  
 Skype: eliza\_abl  
 Phone: +40.3324.14752  
 Mobile: +40.771.264.031  
 From USA: +1.305.455.8675  
 http://www.eyepartner.com